
INSTALLATION INSTRUCTIONS *INST-17-62-020P1*

JK Brawler™ Rear Bumpers with Tire Carrier

IMPORTANT: Thank you for purchasing this Poison Spyder product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call Poison Spyder as soon as possible. This document last updated August 2025.

APPLICATIONS

These installation instructions apply to the following Poison Spyder products:

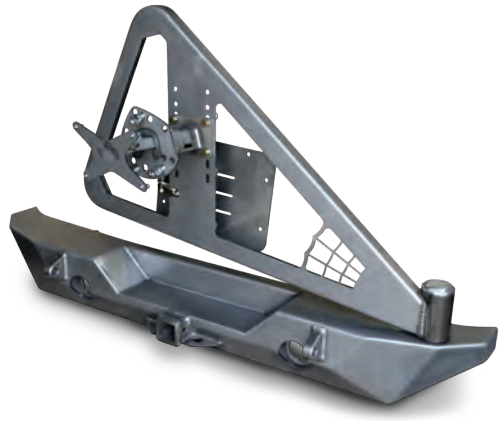

17-62-020-P1 JK RockBrawler II Rear Bumper Tire Carrier - Tabs - Black SpyderShell

PARTS LIST

(1) JK RockBrawler II Rear Bumper with Tire Carrier

(1) JK RockBrawler Rear Bumper Mount Hardware Kit

PN: HWKIT-17-62-010 includes:

- (2) M12 X P1.75 X 105 MM. Hex Bolt
- (2) M12 X P1.75 Steel Lock Nut
- (4) M12 Flat Washer
- (2) 3/8-16 X 1 Gr8 Hex Head Cap Screw
- (2) 3/8-16 Extruded U-Nut Clip
- (2) 3/8" SAE Hardened Flat Washer

(1) RockBrawler II Tire Carrier

Pre-Assembled with:

- (2) Tapered Roller Bearing 1.375 ID 0.7200 Width
- (1) 1"-14 Gr8 Nylon Insert Lock Nut
- (1) 1" SAE Hardened Flat Washer

(1) Spyder Web Gusset Detail

(1) RockBrawler II Tire Carrier Hardware Kit

PN: HWKIT-17-62-020 includes:

- (2) 3/8-16 X 1 Gr8 Hex Head Cap Screw
- (2) 3/8-16 X 1-3/4 Gr8 Hex Head Cap Screw
- (8) 3/8" SAE Hardened Flat Washer

(1) Tire Gate Hardware Kit

PN: HWKIT-17-62-020-1 includes:

- (4) 3/8-16 Nylock Nut
- (4) 1/4-20 x 1 SS BHSCS
- (4) 1/4-20 Nylock Nut
- (4) 1/4 SAE Hardened Flat Washer
- (1) ½" Black UHMV V-Align Bushing

(1) RockBrawler II Turnbuckle Assembly

PN: HWKIT-17-62-020-3 includes (pre-assembled):

- (1) 3/8-24 X 1-5/8 Aluminum Turnbuckle Connector
- (1) 3/8-24 X 2-1/8 Spherical Rod End (Right Hand Thread)
- (1) 3/8-24 SS Jam Nut (Right Hand Thread)
- (1) 3/8-24 X 2-1/8 Spherical Rod End (Left Hand Thread)
- (1) 3/8-24 SS Jam Nut (Left Hand Thread)

(1) Rock Brawler Pivot Cap Wrench

(1) 3-Piece Adjustable Tire & License Plate Mount Kit

Includes:

- (1) Adjustable Tire Mount - Carrier Side
- (1) Adjustable Tire Mount - Tire Side
- (1) Adjustable License Plate Mount

(1) 3-Piece Adjustable Tire & License Plate Mount Hardware Kit

PN: HWKIT-17-61-030 includes:

- (4) 7/16-14 X 1 Gr8 Hex Head Cap Screw
- (4) 7/16-14 Gr8 Nylon Insert Lock Nut
- (8) 7/16" SAE Hardened Flat Washer
- (3) 3/8-16 X 1 Gr8 Hex Head Cap Screw
- (6) 3/8" SAE Hardened Flat Washer
- (3) 3/8-16 Gr8 Nylon Insert Lock Nut
- (4) 1/4" SS Flat Washer
- (4) 1/4-20 X 3/4 SS Button Head Socket Cap Screw
- (6) 1/4-20 Gr8 Nylon Insert Lock Nut
- (4) 1/4" SAE Hardened Flat Washer
- (2) 1/4-20 X 3/4 Gr8 Hex Head Cap Screw
- (3) 1/2-20 X 1.72/1.750 Length Wheel Lug Bolt
- (3) 1/2-20 X 15/16 Hex 60° Seat Open Lug Nut
- (2) LED Back Up Lamps

©2025 POISON SPYDER

TOOLS NEEDED

- Primer, paint, cleaners and masking materials (if painting)
- Mechanic's tool set with a full assortment of SAE and metric end wrenches, sockets, ratchets, hex keys, etc. Note: the large 1"-14 spindle lock-nut requires a 1-7/16" socket.
- Torque wrench
- Drill Motor with 1/4" & 1/2" drill bits
- Measuring tape or ruler
- Felt-tip fine point marker, scribe or punch

INSTALLATION PROCEDURE

1. **Park the Jeep on a** flat, level surface and set the parking brake.
2. **Remove the spare tire, OE** spare tire mount and plastic vent assembly from the center of the tailgate. Keep the OE spare tire mount hardware as it will be re-used.
3. **Remove existing rear bumper. Keep** the OE hardware that attached the bumper to the frame rails, as some of it will be re-used. Disconnect the rear sway bar where it bolts to the outside of the frame rails (most aftermarket sway bars—may not be necessary with stock sway bar).
4. **With the help of a** friend, pre-install the bumper on to the Jeep. The bolt flanges of the bumper will mount between the outside of the frame rail and the sway bar bracket (for those Jeeps equipped with rear sway bars). Note that there are three bolt holes in the bolt flange on each side of the bumper. Two of these bolt holes will align with the stock bolt holes in the frame rail, where the sway bar bracket attaches. Use the OE bumper hardware to secure the bumper in place using these two bolt locations on either side.
5. **Use a felt-tip pen or** 3/8 center punch to mark the location of the third bolt hole on the frame rail, for each side.
6. **Look underneath the bumper, note** that there are 4 bolt holes along the bottom surface of the bumper. The driver's side, outside hole will need to be marked to drill a corresponding hole in the crossmember that sits just behind it. Use a center-punch or fine-tip felt marker to mark the hole location. You may notice that the outside passenger side already has a through-hole through the crossmember. Disregard the two center holes.



7. **Remove the bumper from the** Jeep.
8. **Drill upward through the crossmember,** at the hole location marked in the previous step. Start with a smaller drill size such as 1/4", then step up to the 1/2" bit for the final hole size. Drill through both the bottom and top surfaces of the bumper, trying to hold the drill perpendicular so the holes are vertically aligned.
9. **Drill the third bolt hole** on the sides of each frame rail to 1/2". It is best to start with a smaller drill size such as 1/4", then step up to the 1/2" size bit.



10. **Apply touch-up paint to the** bare metal around the edge of the holes that were drilled in the previous steps. Properly coating these areas at this time will help to prevent rust in the future.
11. **Insert a 3/8-16 Clip Nut** through the oblong-shaped hole in the frame rail, and clip it into the new hole just drilled. Make sure the extruded thread barrel of the clip nut points inward. Do this on both frame rails.

36. **Lift the spare tire onto** the Tire Mount - Tire Side, and fit the previously installed lug studs through the holes in the wheel. Tighten the (3) Lug Nuts. This will draw the sides of the tire tightly against the frame of the Tire Carrier, to prevent rattles and squeaks.





37. **Use (4) 1/4-20 X 3/4** SS Button Head Cap Screws, (4) 1/4 Flat Washers and (4) 1/4-20 Lock Nuts to fasten your license plate to the License Plate Mount.
38. **Use the 1/4-20 X 3/4** Hex Head Cap Screws with 1/4 Flat Washer and 1/4-20 Nut to fasten the License Plate Mount to the Tire Mount at the center of the spare tire. Note that you will need to keep these wrenches available in the vehicle in order to remove the license plate mount to access your spare tire in the future.



39. **If required by law in** your area, you will need to install a license plate light to illuminate the plate at night. Poison Spyder sells separately an LED License Plate & Third Brake Light (p/n 41-04-LP6) that is designed specifically for this purpose, and comes with a 6' lead to route down the tire carrier to tie into the Jeep's wiring. Instructions for making the electrical connections are outside of the scope of these instructions, however please note that the tire carrier has small loops laser-cut into the tire carrier swing to make routing and securing the license plate light easy. Simply secure the extension cable to these loops with zip-ties to securely hold it in place.



Congratulations, you have completed installation of your RockBrawler™ II or Brawler FULL Width Rear Bumper and Tire Carrier!


weatherstripping as it closes. With the tie rod adjusted test it by firmly (but carefully) closing the tailgate all the way, until it latches. When properly adjusted, this will result in the tie rod firmly pulling the V-Alignment Plate into the V-Bushing, and holding it there with enough pre-load to keep everything tight while the tailgate is shut. Once the tie rod has been properly adjusted, tighten both jam nuts.



30. **Measure the overall height of** your spare tire (NOT one of the mounted tires on your Jeep!), divide that measurement in half, then add one inch. The resulting number will be your Tire Mount Height measurement. With the tire carrier closed and latched, measure upward from the recessed step surface of the bumper, and make a small mark on the tire carrier at the tire mount height measurement.
31. **Use (4) 7/16-14 x 1** Gr8 Hex Head Cap Screws with (4) 7/16 Flat Washers and (4) 7/16-14 Lock Nuts to attach the Tire Mount - Carrier Side to the Tire Carrier, centered on the mark you made in the previous step. The slots in the tire carrier allow for some adjustment, however if there isn't enough adjustment to center the Tire Mount exactly centered on your mark, move it up slightly to the next set of slotted holes in the carrier. Tighten the four bolts/nuts to approximately 50 ft.-lbs.



32. **Look at the Tire Mount** - Tire Side, and note that there are wheel stud holes for several different bolt patterns. Use the Bolt Pattern Template provided at the end of these instructions to determine which THREE holes to use for your specific bolt pattern. Once the three holes are correctly identified, mark them with a felt-tip marker.

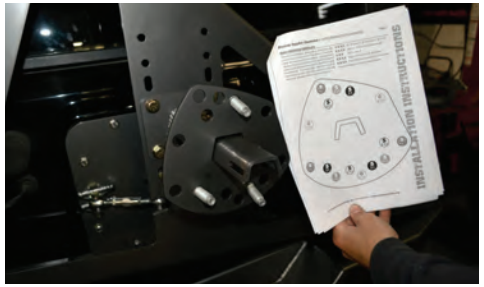

33. **Use a shop press or** hammer to drive the three provided Wheel Studs into the mounting plate, using the holes that were marked in the previous step. Make sure the studs point in the opposite direction from the V-channel piece that is welded to the back of the plate.
34. **Lay your spare tire on** the floor with the mounting surface of the wheel pointed up. Lay a long straight edge (yardstick, level, or other suitable item) across the middle of the tire. Measure the vertical distance from the straight edge to the wheel mounting surface. This is the Overall Offset measurement, including any bulge in the tire sidewall.
35. **Fit the Tire Mount -** Tire Side channel on to the corresponding beam of the Tire Mount - Carrier Side. Use (3) 7/16-14 X 3 Gr8 Hex Head Cap Screws with (6) 7/16 Flat Washers and (3) 7/16-14 Lock Nuts to secure the Tire Mount-Tire Side to the Tire Mount - Carrier Side, using the slotted holes provided. Adjust the position of the mounting surface of the distance between the Tire Mount and the surface of the tire carrier frame is 1/4 to 1/2 inch LESS THAN the Overall Offset measurement found in the previous step. Once properly adjusted, tighten the three bolts/nuts to approximately 50 ft.-lbs.



NOTE: Some tire/wheel combinations, such as 12.50 wide tires on stock Jeep wheels, may require more Overall Offset than the adjustment in the Tire Mount components allows (approximately 4-3/4" to 6-3/4"). In these cases, source a wheel spacer of suitable thickness to make up the difference.



12. **Reinstall the bumper using the** OE hardware in the two original bolt locations on the sides of the frame rail, and a supplied 3/8-16 X 1 Gr8 Hex Head Cap Screw with 3/8 Flat Washer in each of the new bolt locations on the outside of the frame rails. Note that both the bumper's mount flanges should be inserted between the outside of the frame rail and the sway bar bracket (if sway bar is present).
13. **Insert the** M12 X P1.75 X 105 MM. Hex Bolt Head Cap Screws into the two outside holes along the underside of the bumper, with a M12 Flat Washer under the bolt head. Insert the bolt up through the holes in the bumper and both top and bottom surfaces of the crossmember. Secure them with a M12 X P1.75 Steel Lock Nut and M12 Washer, where they protrude through the top of the crossmember. You may have to do this by feel, as you won't be able to see the locations of the nuts and washers up inside the bumper shell.



14. **Install led back up lamps** using the supplied rubber grommets and electrical pigtails for wiring connection.
15. **Wearing latex or nitrile gloves,** "Pack" the two tapered roller bearings with a quality wheel bearing grease by hand or with a bearing packing tool. The two matching bearing races are already pressed in to the tire carrier hinge housing.
16. **Apply a light sheen of** grease to the bare metal surfaces of the inside of the tire carrier pivot housing and bearing races, as well as the hinge spindle on the bumper (do not coat the threads for the spindle nut). This will help discourage rust formation on these bare metal surfaces.



17. **Insert a Tapered Roller Bearing** into the pre-installed Lower Race, inside the Hinge Housing. Ensure that it seats correctly and "feels right" in the race. Excess grease may hold it in place temporarily, but it may be helpful to turn the tire carrier upside down until the next step is completed.



18. **Use a bearing seal driver** tool to carefully install the grease seal into the bottom of the hinge housing. If the proper tool is not available, the step may be performed by carefully using a large socket of the approximate diameter of the seal and a soft dead-blow hammer to work the seal into its seat. Be very careful to drive the seal in evenly, do not let it get misaligned while driving it in.





19. **Install the Tire Carrier onto** the bumper, carefully guiding the hinge housing down over the hinge spindle. Be careful not to damage the grease seal when lowering the tire carrier on to the spindle. There is a very tight-tolerance slip-fit between inner diameter of the tapered roller bearing and its seating surface on the spindle. Be careful not to let the bearing get misaligned as you lower the carrier onto the bumper. Have a friend support the opposite end of the tire carrier during this and the next two steps.




20. **Install the remaining Tapered Roller** Bearing by dropping it down over the hinge spindle, narrow end pointed downward. Carefully slide it down the spindle until it is seated into the upper race.



21. **Apply some anti-sieze thread lubricant** to the threads on the spindle. Install the large 1" Flat Washer next on the spindle, followed by the 1"-14 Lock Nut. Tighten the lock nut until it just touches the washer and bearing, then have your friend slowly swing the tire carrier back and forth as you tighten the lock nut the rest of the way.



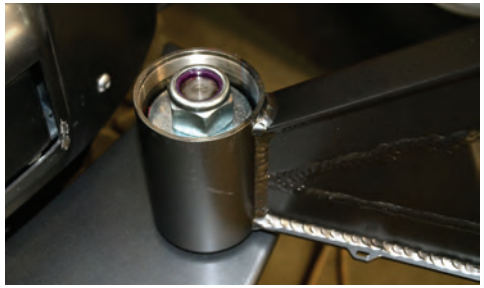


We can not supply a torque specification for this nut, just get it as tight as it takes to properly seat the bearings and provide smooth operation of the tire swing without any "play". Re-tighten this nut after the weight of the spare tire and accessories have been added, and again after a few days or a hundred miles of use. You may need to re-tighten this nut several more times until it permanently seats.



22. **Install the Pivot Cap O-Ring** onto the outside of the threads of the Billet Hinge Cap, just under the head of the cap (NOTE: this may have already been done prior to shipment).



23. **Thread the Hinge Cap onto** the Hinge Housing and *lightly* tighten with the provided Pivot Cap Wrench. Note that you may have to remove it in later steps to further tighten the spindle lock nut, so don't fully tighten the cap until installation is complete.

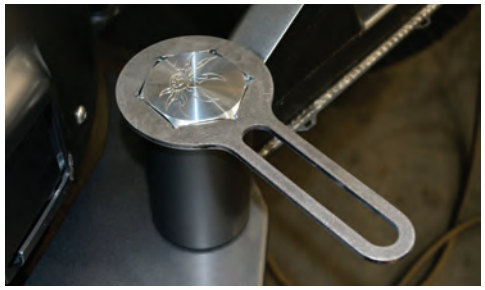

24. **Use the OE Spare Tire** Mount hardware to attach the Tailgate Plate to the tailgate. The TailGate Plate must be oriented so the welded-on brackets are toward the top and driver side.


25. **Install the 1/2" Black UHMW** V-Alignment Bushing on to the corresponding bracket on the Tailgate Plate using the supplied hardware, as shown.



26. **Install the V-Alignment Plate on** to the back side of the Tire Carrier using the supplied hardware.



27. **Test that it seats correctly** into the V-Alignment Bushing on the Tailgate Plate when the Tire Carrier is closed against the tailgate. Adjust as necessary then tighten all fasteners.

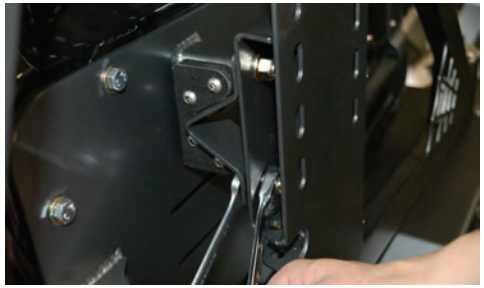

28. **Assemble the Aluminum Turnbuckle, Spherical** Rod Ends and SS Jam Nuts into a tie-rod assembly. Note that there are left hand threaded and right hand threaded ends of the turnbuckle, rod ends and nuts. (NOTE: the Turnbuckle Assembly may have already been pre-assembled at Poison Spyder). Use the provided hardware to attach one end of the tie rod to the Tailgate Plate, and the other end to the corresponding tabs in the back side of the Tire Carrier, as shown.



29. **Leave the jam nuts on** the turnbuckle loose, and adjust the length of the tie rod by rotating the turnbuckle. Adjust the length so that the V-Alginment Plate just begins to touch the V-Alignment Bushing when the tailgate is about 1/2" from being fully closed and latched. This is approximately the point at which the tailgate begins to compress the

BOLT PATTERN TEMPLATE

Use this Bolt Pattern Template to determine the correct holes to use in the Tire Mount - Tire Side plate, for your specific bolt pattern. The plate can be used for any of 5 different bolt patterns, each of which uses 3 holes which can be identified using the template. The list at right identifies some of the vehicle models each bolt pattern is typically used with, although there may be exceptions.

5 X 4.5 '87-'96 Jeep YJ, '97-'06 Jeep TJ, '84-'01 XJ


5 X 5.5 Jeep CJ, 1/2-ton Ford & Dodge trucks*

5 X 5 2007+ Jeep JK

6 X 5.5 Toyota, 1/2-ton Chevy & Jeep trucks*

8 X 6.5 Ford, GM, Dodge & Jeep 3/4- & 1-ton trucks*

*Prior to converting to metric for various models

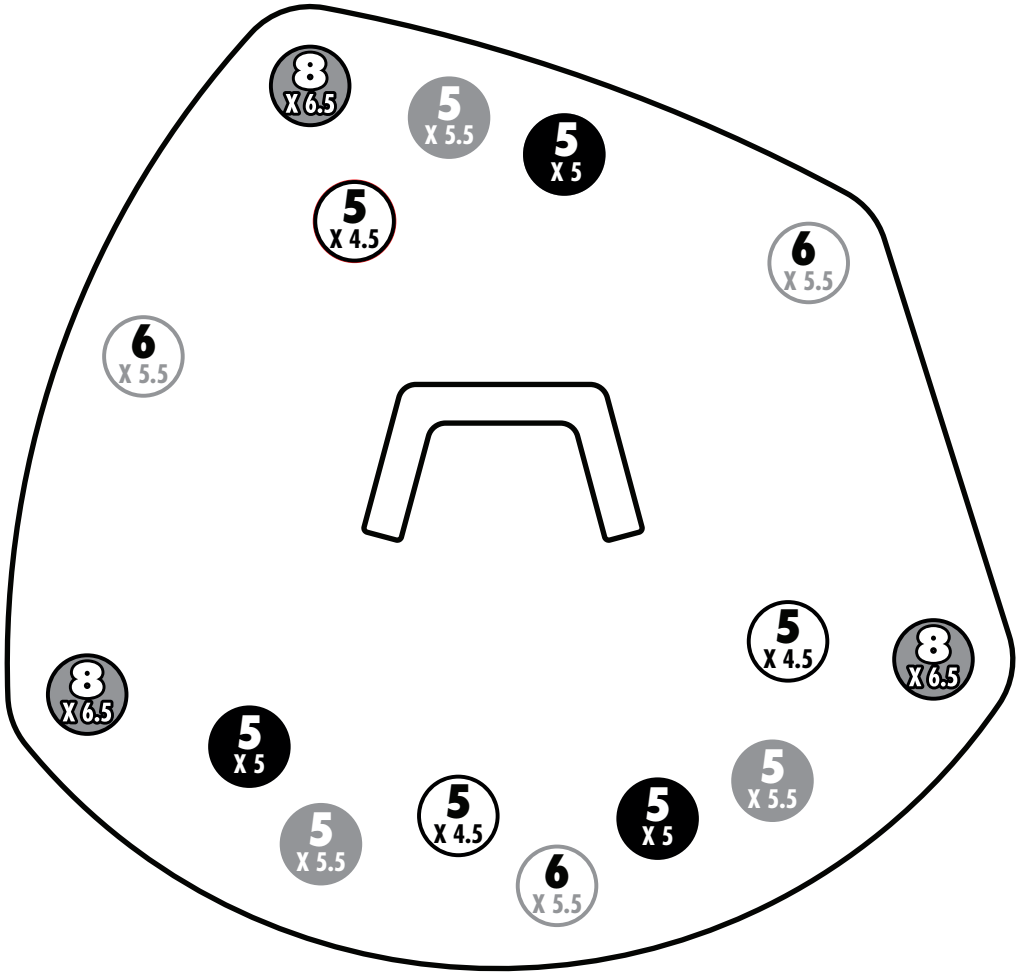

Poison Spyder Consumer Terms & Conditions

Product Care & Maintenance

Raw Aluminum Finish – Clean using a mild soap-and-water solution, then dry thoroughly with a soft cloth to prevent water spots. To reduce oxidation, apply a high-quality aluminum protectant or clear sealant periodically. Avoid harsh chemicals, acidic cleaners, or abrasive pads that may scratch or discolor the surface. Raw aluminum may naturally develop a patina over time; regular cleaning and protectant application will help preserve its look.
Stainless Steel Finish – Use a non-abrasive aluminum polish to address minor scratches or scuffs. For routine cleaning, use mild soap with water or a non-abrasive glass cleaner. To protect the finish, apply a high-quality carnauba automotive wax regularly. Do not use abrasive cleaners, polishes, or non-carnauba waxes as they may cause damage.
Smooth Powdercoated Finishes – Clean using mild soap and water with a soft cloth or sponge. For added protection, apply a non-abrasive automotive wax formulated for painted finishes. Avoid abrasive cleaners, solvents, or high-pressure washing directly at edges and seams, as this can compromise the coating and lead to chipping or peeling.
Textured Coated Finishes – Clean with mild soap and a damp sponge. Do not use polishes or waxes requiring buffing, as these can damage the textured surface.
Chrome Finish – Clean with mild soap and water, or a non-abrasive glass cleaner. Protect the finish by applying pure carnauba automotive wax regularly. Avoid abrasive products.

Limited Warranty

Poison Spyder offers a **Limited Lifetime Warranty** on the materials and construction of its fabricated products. This warranty guarantees to the original retail purchaser that the product will remain free from structural defects in material and workmanship for as long as they own it, subject to the terms and exclusions below.

Powdercoat "Spydercoat" Finish Coverage

5-Year Warranty – Standard-use products with powdercoated finishes are covered against defects for **five (5) years.**

1-Year Warranty – Products specifically designed for heavy contact with terrain—such as frame-mounted rocker protection and skid plates—carry a **one (1) year** finish warranty.
Finish warranties do not cover scratches, chips, or damage caused during installation, impacts, or normal wear and tear.

Exclusions

This warranty does not cover: Misuse, improper installation, or inadequate maintenance On-road or off-road hazards,accidents, or impacts Unauthorized modifications Normal wear and tear Racing or competition damage Chemical exposure (including road salts, de-icing agents, cleaning chemicals, or corrosive substances) Extreme environmental conditions (including prolonged exposure to moisture, UV radiation, or highly corrosive climates such as coastal or winter road environments)

Terms

The warranty is **non-transferable** and applies only to the original purchaser with valid proof of purchase. Remedy under this warranty is limited, at Poison Spyder's discretion, to repair or replacement of the defective product, provided it is returned at the customer's expense. Coverage eligibility is determined solely by Poison Spyder. Product designs, specifications, and finishes are subject to change without notice.

Legal Rights

Some states/jurisdictions do not allow limitations on implied warranties or the exclusion of incidental/consequential damages. This warranty provides specific legal rights, and you may also have additional rights that vary by state or

Safety Warning

Vehicle modifications, including the use of Poison Spyder products, can affect handling, stability, and performance, potentially increasing the risk of accidents or rollovers.

- Poison Spyder products are decorative and not intended to prevent injury or damage in an accident.
- Review applicable state and local laws before installation. Ensure products do not obstruct lights or interfere with vehicle safety systems, and comply with bumper mounting height rules & regulations.
- Always follow your vehicle owner's manual and Poison Spyder installation instructions.
- Safe driving remains the sole responsibility of the driver. Always wear seat belts, obey traffic laws, avoid impaired driving, and adjust speed to road conditions.

Proposition 65 Warning (California Only):
This product can expose you to chemicals known to the State of California to cause cancer and reproductive harm.